


Planking for Access

Plank size minimum of 240mm x 38mm and at least 2100mm long to spread the load, max 100kg. Planks need to be inspected before use to ensure they are in serviceable condition. If there is any doubt the planks should be replaced.


Planks should be placed, not dropped to avoid damage to the roofsheets.

The roofsheets should be protected from the planks, rags or other similar material will reduce scratching of the Colorbond when moving the planks

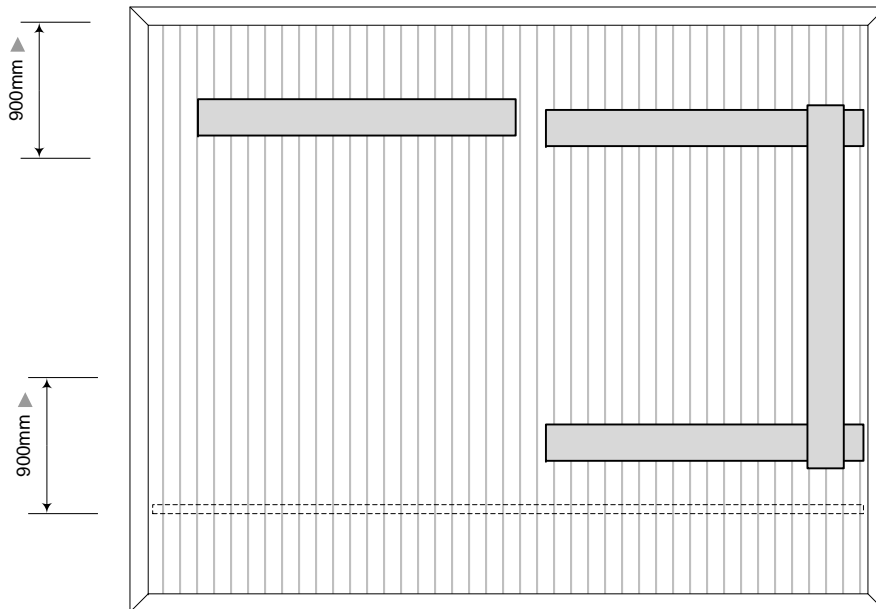

Multiple planks may be required to reach the intended area. At all times care should be taken when using planks

Planks should not be used on the overhang area beyond the beam.

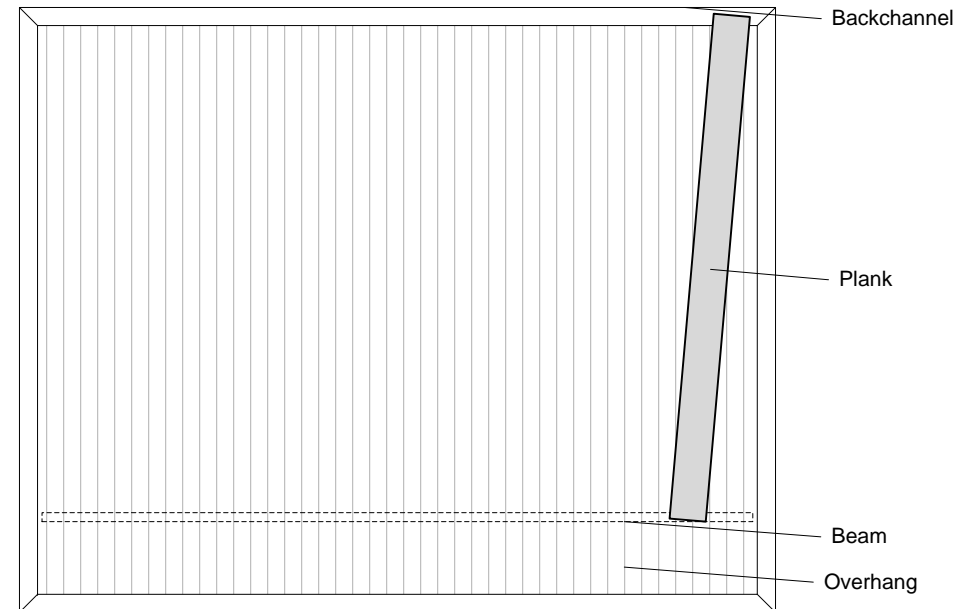

Planks running parallel with the roof sheets, without other planks at 90 degrees, should be angled over at least 2 roofsheets and extend to within 200mm of the backchannel or beams but preferably over them.

Ladder placement for access to the roof should be in accordance with the ladder manufacturers specifications and near a gutter bracket on the roof.

ALLFORM
Home Additions

PO Box 4549, PENRITH NSW 2750
Ph: 02 4729 5500 Fx: 02 4729 5599
ABN: 44 095 855 833 Lic # 130727C

Planking for Access

Drawn By: PC

Date: 2014

Sheet No.: 1

Scale: 1:50